




Due to manufacturing differences with some endlinks, you may need to use the supplied washers to help secure your endlinks or strut if there is any side to side play.

1 or 2 washers may need to be inserted on either side of your endlinks, shown below.

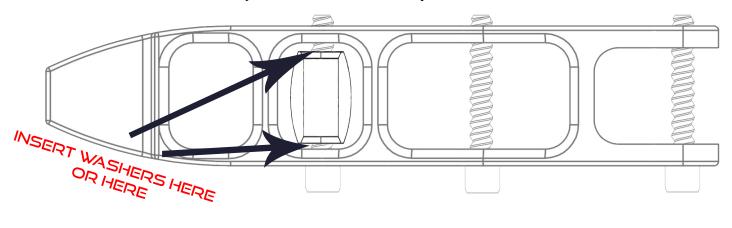

Grease is included with the control arms.

To apply, remove the pillowbal inserts and using a flat head screw driver, lift the rubber seal and squeeze the grease onto the pillowball. repeat for both sides of the pillowball.

